


Assembly (Read before beginning)

Porsche 911 (997) Carrera S Coupe

Item No. 22477







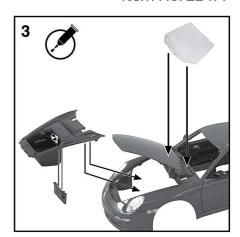






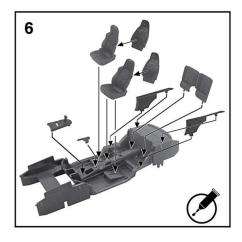

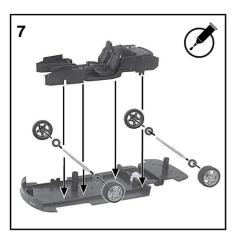



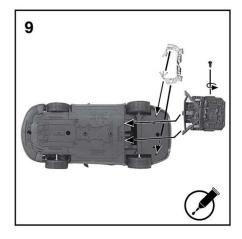



Use glue to fix (where required use Non Toxic Adhesive) (no glue included)



Use #1 small cross head screwdriver to drive screws (screwdriver included)



Clockwise direction